


# Able Assist Transfer Aid spares - PT003 & PT004

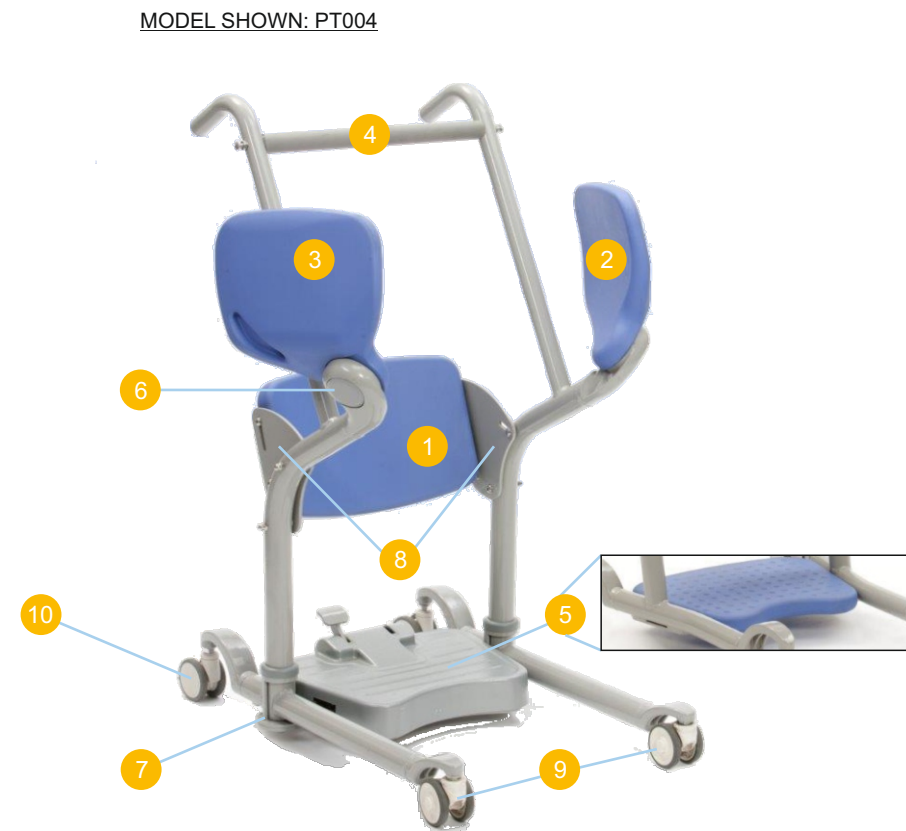

1. KNEE PAD  
CODE: Z35132-16
2. POSTERIOR PAD, RIGHT  
CODE: Z35133-16
3. POSTERIOR PAD, LEFT  
CODE: Z35134-16
4. TPR COVERED GRAB BAR/SCREWS  
CODE: Z35135-16
5. FLOOR SUPPORT PT004  
CODE: Z35140-16
6. FLOOR PAD PT003  
CODE: Z35136-16
7. PLASTIC CAP, SEAT PAD PIVOT  
CODE: Z35141-16
8. LEG ACTION PIVOT FIXING SET PT004  
CODE: Z35142-16
9. ADJ BRACKETS, PAIR INCLUDES SCREWS.  
CODE: Z35139-16
10. PLAIN TWIN CASTOR 75mm  
CODE: Z35130-16

**NOT SHOWN**

SCREW PACK, PT003  
CODE: Z35137-16

SCREW PACK, PT004  
CODE: Z35138-16

## Flow chart to select correct castor

